



WIJET.G

QUICKSTART GUIDE

Included in the package:

- WiJET.G Unit
- Antenna
- 5V DC Power Adapter
- CD-ROM with Application Software and Technical Manual
- Quickstart Guide
- Registration Card

Step 1: Connecting WiJET.G Physically

- A.** Connect the VGA cable from a projector/monitor to the VGA port at the rear of the WiJET.G unit.
- B.** Turn on the projector/monitor.
- C.** Connect the provided 5V DC power adapter into the port labeled 5V at the rear of the WiJET.G unit. The ON LED will turn solid green.
- D.** At the end of a brief "boot up" period, a banner page should be displayed by the WiJET.G through the connected projector/monitor. The LINK Indicator on the front of the unit should blink **red**.
- E.** The WiJET.G unit now is ready for connection to an 802.11b/g equipped PC.

Step 2: Configuring your PC for WiJET.G

- A.** Take note of the SSID located at the top left of the banner page displayed by the unit.
- B.** Follow the manufacturer's instruction to configure the WiFi 802.11b/g adaptor as a **Station** and in **Infrastructure** mode. Connect PC adaptor to the AP with the **SSID** of WiJET.G noted above.
- C.** For optimal performance, disable the PC's **Video Hardware Accelerator**. From the Display Properties window, click on the "Settings" tab. Click on the "Advanced" button followed by the "Troubleshoot" tab. Move the slider for "Hardware acceleration" to none. **Turn off the XP firewall**. Refer to MS Windows administration references for the instructions.

Step 3: Installing Software & Using WiJET.G

- A.** Insert the provided WiJET.G CD-ROM on a Windows 98/NT/2000/XP computer and a dialog should come up. You can choose to run the **Presentation Session Manager (PSM)** software directly from the CD-ROM for temporary use, or to install it on the host PC for frequent use. With installation, the PSM will be available on the Windows Desktop and the Start menu.
- B.** Double-click on the WiJET.G shortcut on the Desktop or the WiJET.G executable on the CD-ROM to start the **PSM**. Alternatively, go to Start, Program Files, WiJET.G Utility, click on "WiJET.G PSM" to start it. The main **PSM** dialog will show.
- C.** Click the "Establish a Session" button on the **PSM** and the WiJET.G should display the computer's desktop through the connected projector/monitor. The WiJET.G is now in session!

Note: Your wireless device must have a valid IP for **PSM** to establish a session. The wireless device running DHCP may take a

long time to have a valid IP address assigned. You can choose to manually assign an IP address to the host. Please refer to Technical Manual Chapter 3.

- D.** Click "Release the Session" button to release the connection to the WiJET.G and allow another user to connect to the WiJET.G. You can re-connect to the WiJET.G by clicking "Establish a Session" again as soon as the other user has released the WiJET.G session.

- E.** To exit the **PSM**, click on "exit".

Step 4: Administering WiJET.G

- A.** Follow Step 2 to configure your wireless adapter card. Follow Step 3 to run the PSM and connect with the WiJET.G unit. Right-click on the WiJET.G icon on the System Tray and select the menu item to show connected WiJET.G unit(s).
- B.** Select the unit to be administered and click on the "Admin" button. This launches a Web browser and accesses the WiJET.G administrative facilities. First you must log-in. At default, enter the "admin" for user name and "public" for password.
- C.** Navigate the administrative web pages to customize the configuration of WiJET.G unit.

Please consult the **WiJET.G Technical Manual** for additional features and customization.

For more product information, please visit www.otcwireless.com. For technical support, email to support@otcwireless.com or telephone (510) 490-8288.